

Kids' Ski Boot Size Conversion Chart

Mondopoint (cm)	US Kids	UK Kids	EU
15.5	8.5	7.5	25
16	9	8	26
16.5	9.5	8.5	26.5
17	10	9	27
17.5	11	10	28
18	11.5	10.5	29
18.5	12	11	30
19	13	12	31
19.5	13.5	12.5	31.5
20	1	13	32
20.5	1.5	13.5	33
21	2	1	33.5
21.5	2.5	1.5	34
22	3	2	35